

ATLAS 408-SL, 409, 412(A), 414(A) 4 Post Lift

LITTLE SQUEAKS and TWEAKS

Before assembling the cross beams to the columns, take the time to lubricate the locking ladder limit pins with a quality lubricant. Apply the lubricant on all limit pins and where the limit pins insert through the cross beams.

